

BAYITE BTC211 Digital Temperature Controller

1) Hold down Set for 3 seconds

This shows the parameter in the top screen.

In this case we want to change the **SV** parameter which will **Set the Value** of the cut off temperature.

2) Now use the up down buttons (on the right) to set the cut off temp.

3) Press Set again.

4) Now the parameter is changed to **HD** which is the **Heating Differential** for example if we want the high temp to be 50 and the low to be 40 we would set the SV to 50 and the HD to 10.

5) Now press power to quit the Settings menu and save.