


## NAME OF EACH PART

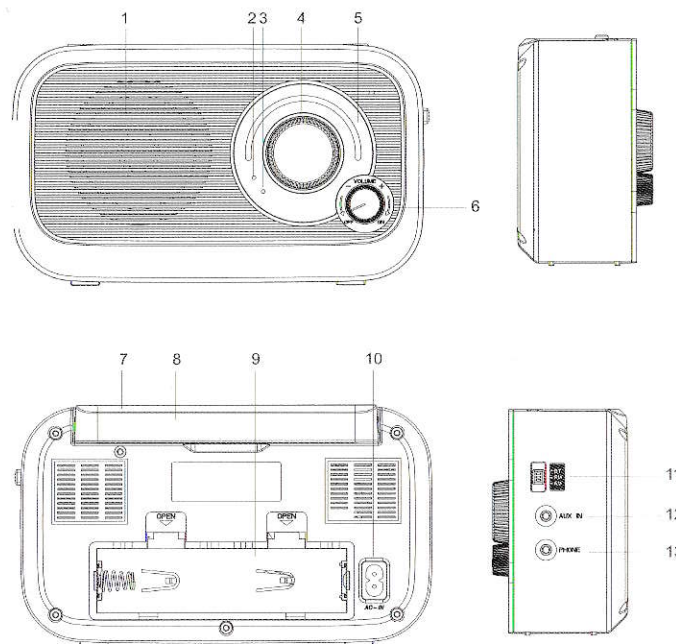

- |                        |                         |
|------------------------|-------------------------|
| 1. Speaker             | 8. Handle               |
| 2. BT indicator        | 9. Battery cover        |
| 3. Tuning indicator    | 10. AC Power Outlet     |
| 4. Tuning button       | 11. Function switch     |
| 5. Table ruler         | 12. External audio jack |
| 6. Volume/Power switch | 13. Headphone jack      |
| 7. Telescopic antenna  |                         |

2

## RADIO FUNCTION

Twist the "OFF POWER" button to the right (in the direction of MAX VOLUME), hear a sound of the card, and then adjust the volume to an appropriate size

### 1. FM Position:

Adjust the band button to the FM position, then twist the "TUNING" button, you can listen to any radio program from 87.5-108MHz.

### 2. AM Position:

Adjust the band button to the AM position, then twist the "TUNING" button, you can listen to any radio program from 520-1710KHz.

### 3. The "TUNING" indicator lights up when a valid radio station is received.

#### Notice:

- When listening to "FM" radio, please pull out the telescopic antenna for better reception.
- When the received radio signal is not good in AM, please adjust the direction and placement of the radio to get better reception results.

### 4. BT Status:

- Push the function switch to the BT position, and use the mobile phone to search for the pairing name: YR-2105. For pairing, a prompt tone will sound after the code is paired.
- After connecting to BT, you can play music through BT devices such as mobile phones

### 5. AUX Operation:

- Turn the "OFF POWER" button to the right (in the direction of MAX VOLUME), hear a sound of the card, and then adjust the volume to an appropriate level.
- Then insert the AUX cable into the AUX IN jack, after the connection is successful, adjust the volume to play the external audio source.

### 6. Operation Of The Headset:

When listening with headphones, please insert the plug of the headphone cable into the headphone jack, and the speaker will be automatically disconnected and muted.

## HOW TO USE THE POWER CORD

This machine can be used by plugging in the power cord or installing dry batteries

- Insert the power cord into the AC socket on the back of the main unit, and insert the power plug into the socket.
- Please remove the dry battery when using the power cord.
- If there is a dry battery in the main unit, connect the power plug to the socket, and it will switch to household power. When using dry batteries, please turn the power. The plug is removed from the socket.

## REPLACE DRY BATTERIES

When the sound becomes smaller or distorted during playback, the battery should be charged or replaced in time.

- Push and pull the battery door latch, open the battery door, insert 4 (UM-3) batteries according to the direction shown in the battery room, and cover the battery door.
- When installing the battery cover, please align the holes first, then press down until you hear a click.

## MAIN PERFORMANCE INDEX

Power supply : AC 120V/60Hz  
 : DC 6V(battery×4)  
 Output impedance : Speaker 4Ω 3W  
 Output Power : 1.2W  
 Frequency Range : FM 87.5-108MHz  
 : AM 520-1710KHz  
 Weight : 0.62Kg  
 Dimension : 220x75x128mm

3